

Table of Contents

Introduction	i	3.2.3	Digital Interface Module Ports (5)	3-7
CHAPTER 1		3.2.4	Alarm Port (6)	3-7
1. cdoPrima Overview	1-1	3.2.5	Remote Control Port (7)	3-7
1.1 Model 110 Description	1-4	3.2.6	Ancillary Data Port (8)	3-7
1.2 Model 120 Description	1-4	3.2.7	AES/EBU Digital Audio I/O (9, 10)	3-7
1.3 Model 210 Description	1-5	3.2.8	S/PDIF Digital Audio I/O (9, 10)	3-8
1.4 Model 220 Description	1-5	3.2.9	Opto/Relay I/O (100 Series) (11)	3-8
1.5 Model 230 Description	1-5	3.2.10	RS232 Port (200 Series) (12)	3-8
1.6 cdoPrima Features	1-6	3.2.11	Sync Data (200 Series) (13)	3-8
1.6.1 Mechanical Features	1-6	3.2.12	RS485 Port (200 Series) (14)	3-9
1.6.2 Audio and Time Code	1-6	3.2.13	SMPTE Time Code (200 Series) (15)	3-9
1.6.3 Ancillary Data	1-7	3.2.14	Relay Outputs (200 Series) (16)	3-9
1.6.4 Audio Compression	1-8	3.2.15	Optically Isolated Inputs (200 Series) (17)	3-9
1.6.5 Control Features	1-8	3.2.16	Optical Digital Audio I/O (18)	3-9
1.6.6 Pre-Programmed Quick-Configurations	1-9	CHAPTER 4		
1.6.7 Auto Detection of Incoming Calls	1-10	4.	The cdoPrima Keypad and Display	4-1
1.6.8 On-Site Software Upgrades	1-10	4.1	Character Display (Models 110, 120, 210 & 220)	4-1
1.6.9 Digital Interface Modules	1-10	4.2	Graphics Display (Model 230)	4-2
CHAPTER 2		4.3	Front Panel Controls	4-2
2. Unpacking & Inspection	2-1	4.3.1	Cursor Keys (All Models)	4-3
2.1 Location of Units	2-1	4.3.2	Alphanumeric Keypad (All Models)	4-3
2.2 Environmental Considerations	2-1	4.3.3	Dial Keypad (All Models)	4-4
2.3 Configuration Dependencies	2-2	4.3.4	Dial Setup Keys (All Models)	4-4
2.4 Remote Control Considerations	2-2	4.3.5	Menu Keys (Models 120, 220 & 230 only)	4-5
2.4.1 Remote Control of Models 110 and 120	2-2	4.3.6	Headphone Keys (Models 120, 220 & 230 only)	4-5
2.4.2 Remote Control of Models 210, 220, and 230	2-3	4.3.7	Cue Keys (Models 120, 220 & 230 only)	4-6
CHAPTER 3		4.3.8	Level Control Keys (Model 230)	4-7
3. cdoPrima Connections	3-1	4.3.9	Measurement Keys (Model 230 only)	4-7
3.1 Connections to the Network	3-1	4.3.10	Function Keys (Model 230 only)	4-8
3.1.1 V.35 Using the DIF102 Digital Interface Module	3-2	4.4	Front Panel Status Indicators	4-8
3.1.2 X.21, RS422/RS449 Using the DIF101 Digital Interface Module	3-2	4.4.1	Encoder and Decoder Status LEDs	4-9
3.1.3 ISDN Using the TA101 Digital Interface Module	3-4	4.4.1.1	PLL	4-9
3.1.4 ISDN Using the TA201 or TA301 Digital Interface Module	3-4	4.4.1.2	MONO4-9	
3.2 Rear Panel Connectors	3-5			
3.2.1 Power & Power Switch (1, 2)	3-5			
3.2.2 Analog Audio I/O (3, 4)	3-5			

4.4.1.3	DMONO	4-9	5.4.1.5	Terminal Adapter TA201 Configuration, Non-North American Operation	5-17
4.4.1.4	JSTEREO	4-9	5.4.1.6	Other TA Parameters	5-19
4.4.1.5	STEREO (230 only)	4-10	5.4.1.7	Terminal Adapter Configuration Storage and Recall	5-21
4.4.1.6	MUSICAM	4-10	5.4.2	Automatic Encoder and Decoder Configuration using Quick Configurations	5-22
4.4.1.7	G.722 4-10		5.4.3	Manual Encoder Configuration	5-24
4.4.1.8	AES/EBU (Encoder only)	4-10	5.4.3.1	Audio Source Selection	5-24
4.4.1.9	ANALOG (Encoder only)	4-10	5.4.3.2	Algorithm, Mode, Bit Rate and Sample Rate Selection	5-25
4.4.1.10	SUM (230 only)	4-10	5.4.4	Manual Decoder Configuration	5-28
4.4.1.11	ACE (230 only)	4-10	5.4.5	Speed Dialing and Directory Maintenance (Terminal Adapter Only)	5-30
4.4.1.12	DPLL (230 only)	4-10	5.4.6	Manual Dialing and Connection Status (TA Only)	5-32
4.4.1.13	CCS (230 only)	4-11	5.4.7	Alphanumeric Characters in Dial String	5-34
4.4.1.14	ALG1 (230 only)	4-11	5.4.8	Remote Control Configuration	5-34
4.4.1.15	H.221 (230 only)	4-11	5.4.8.1	Remote Control (Rear Panel - All Models)	5-35
4.4.1.16	CCSIMUX (230 only)	4-11	5.4.8.2	Front Panel Remote Control (Models 120, 220, 230)	5-37
4.4.1.17	FRAMED (decoder only)	4-11	5.4.9	Loopback	5-38
4.4.1.18	BER (Decoder only)	4-11	5.4.10	Headphones (models 120, 220 and 230 only)	5-39
4.4.2	Status	4-11	5.4.11	Status and Level Display (models 120, 220 and 230 only)	5-39
4.4.2.1	SCUE1	4-11	5.4.12	FFT (Spectrum Analyzer) and Phase Display (Model 230 Only)	5-41
4.4.2.2	RCUE1	4-12	5.4.13	Hot Keys (Model 230 only)	5-42
4.4.2.3	DIF1, DIF2, DIF3, DIF4, DIF5 and DIF6	4-12	5.4.14	Fan Control, Display Contrast, Keypad Beeper and Audible Alarm	5-42
4.4.3	Level LEDs (Model 120, 220 & 230 only)	4-12			
4.4.3.1	Peak & Average Level LEDs	4-12			
4.4.3.2	Stereo Image Display	4-12			
4.4.3.3	Correlation Display	4-13			
4.4.3.4	Message Display	4-13			
4.4.3.5	Selective Dimming	4-13			
4.4.3.6	Headphone Status Indicators (Model 120, 220 & 230 only)	4-13			
4.5	Front Panel Connectors	4-13			
4.5.1	Headphone Jack (Model 120, 220 & 230 only)	4-13			
4.5.2	Front Panel Remote Control Port (Model 120, 220 & 230 only)	4-14			
CHAPTER 5					
5.	Command and Control Summary	5-1	CHAPTER 6		
5.1	Menu Navigation using Keypad and Display	5-3	6.	Codec Compression Algorithms and Modes	6-1
5.2	Computer or Terminal Control	5-4	6.1	Stereo and Dual Mono	6-1
5.3	Windows® Control	5-5	6.2	Joint Stereo	6-1
5.4	Command Summary—Basic Operation	5-5	6.3	ISO/MPEG Layer III	6-2
5.4.1	Digital Interface and Terminal Adapter Setup	5-6	6.4	MUSICAM and ISO/MPEG Layer II	6-2
5.4.1.1	Digital Interface Setup	5-6	6.5	G.722	6-3
5.4.1.2	Digital Interface Status	5-8	6.6	Algorithm, Mode, Bit and Sample Rate	6-3
5.4.1.3	Terminal Adapter TA101 Configuration.	5-8	6.7	Pre-Programmed Quick Configurations	6-5
5.4.1.4	Terminal Adapter TA201 and TA301 Configuration for North America	5-14	6.7.1	Entry 0 CDQ1000_24:QS	6-7
			6.7.2	Entry 1 CDQ2002LNS:QS	6-7
			6.7.3	Entry 2 H221_2LINES:QS	6-7
			6.7.4	Entry 3 H221_4LINES:QS	6-7

6.7.5	Entry 4 H221_6LINES:QS	6-7
6.7.6	Entry 5 MICRO56:QS	6-7
6.7.7	Entry 6 G.722_56:QS	6-8
6.7.8	Entry 7 G.722_64:QS	6-8
6.7.9	Entry 8 MPEGL2/64K:QS	6-8
6.7.10	Entry 9 MPEGL2/56K:QS	6-8
6.7.11	Entry 10 CCSN/64K:QS	6-8
6.7.12	Entry 11 CCSTEST64	6-8
6.7.13	Entry 12 CCSTEST128	6-9
6.7.14	Entry 13 CCSTESTH221	6-9
6.7.15	Entry 14 CCSTEST56	6-9
6.7.16	Entry 15 CCSTEST112	6-9
6.7.17	Entry 16 CDQ1000/56K:QS	6-9
6.7.18	Entry 17 CDQ2000/112:QS	6-9
6.7.19	Entry 18 CCSN/56K:QS	6-9
6.7.20	Entry 19 G.722_H.221:QS	6-9
6.7.21	Entry 20 CCSN/128K:QS	6-10
6.7.22	Entry 21 CCSN/112K:QS	6-10
6.7.23	Entry 22 CDQ2001/128:QS	6-10
6.7.24	Entry 23 CDQ2001/112:QS	6-10
6.7.25	Entry 24 ZEPHYR/56K:QS	6-10
6.7.26	Entry 25 ZEPHYR/64K:QS	6-10
6.7.27	Entry 26 ZEPHYR/112K:QS	6-10
6.7.28	Entry 27 ZEPHYR/128K:QS	6-10
6.7.29	Entry 28 LYR3/56K:QS	6-11
6.7.30	Entry 29 LYR3/64:QS	6-11
6.7.31	Entry 30 LYR3IND56:QS	6-11
6.7.32	Entry 31 LYR3IND64:QS	6-11
6.7.33	Entry 32 LYR3IND56/32:QS	6-11
6.7.34	Entry 33 LYR3IND64/32:QS	6-11
6.7.35	Entry 34 ROADRUN112:QS	6-11
6.7.36	Entry 35 ROADRUN128:QS	6-11
6.7.37	Entry 36 ZEPH112MONO:QS	6-11
6.7.38	Entry 37 ZEPH128MONO:QS	6-11
6.8	Creating Speed Dial and Quick Configuration Entries	6-12
6.8.1	Example 1 – Save Current Configuration	6-13
6.8.2	Example 2 – Different Send and Receive Algorithms	6-13
6.8.3	Example 3 – Using Place Holders	6-15

APPENDIX A

Menu Tree	1
-----------	---

Index

A

AES/EBU, 2-2
Alarms, 3-7
Algorithm mode, 6-3
 Dual Mono, 6-1
 Joint Stereo, 6-1
 Stereo, 6-1
Algorithms, 6-3, 6-5
 G.722, 1-8, 6-3
 Layer II, 1-8, 6-2
 Layer III, 1-8, 6-2
 MUSICAM, 1-8, 6-2
Ancillary data, 1-7, 1-9, 3-7,
 3-8, 3-9
 Bit rates, 1-7
 Mux mode, 1-7
 Nomux mode, 1-7
 RS232, 3-7, 3-8
 Time code, 3-9
Audio I/O, 3-5, 3-7, 3-8, 3-9,
 5-24, 5-25, 5-28, 5-30
Auto detection, 1-10

B

Bit rates, 4-4, 6-3

C

Cable lengths, 2-2
Cables
 Ancillary data, 3-7
 Digital audio, 2-2, 3-8
 Opto-isolators, 3-9
 Relay, 3-9
 Remote control, 3-7, 5-4,
 5-35
CDQ1000, 4-12
CDQ2000, 4-11, 4-12
Commands, 5-6
 CAA, 5-19, 5-20
 CAC, 5-19, 5-20
 CBR, 5-38, 5-39
 CBZ, 5-43
 CCC, 5-14, 5-18

CCD, 5-33, 5-34
CCR, 5-33, 5-34
CCS, 5-33, 5-34
CCV, 5-43
CDC, 5-33, 5-34
CDI, 5-33
CDS, 5-23, 5-24, 5-30, 5-32
CDT, 5-6, 5-7
CFB, 5-37
CFE, 5-37, 5-38
CFN, 5-43
CFP, 5-37
CHK, 4-9, 5-42
CHP, 5-39
CHU, 4-5, 5-33
CIB, 5-9, 5-13
CID, 5-35
CIE, 5-8
CIF, 4-4, 5-6, 5-7
CIS, 5-8
CKI, 5-34
CLB, 5-20, 5-38
CLC, 5-9, 5-12
CLD, 5-9, 5-12, 5-14, 5-16,
 5-18
CLI, 4-14, 5-40, 5-41
CLL, 5-9, 5-18
CLM, 5-40, 5-41
CPC, 5-35, 5-36
CRB, 5-35, 5-36
CRD, 5-20, 5-33
CRE, 5-35, 5-36
CRI, 5-35
CRM, 5-35
CSA, 5-9, 5-12, 5-14, 5-16,
 5-18
CSC, 5-23, 5-24, 5-30
CSD, 4-5, 5-23, 5-30, 5-31
CSE, 4-5, 5-23, 5-30, 5-31
CSF, 5-23, 5-30, 5-31
CSI, 5-9, 5-11, 5-14, 5-16
CSL, 5-38
CSN, 5-23, 5-30, 5-31
CSW, 5-9, 5-10, 5-15, 5-15,
 5-18
CTA, 5-21, 5-22

CTB, 5-21, 5-22
CTC, 5-20
CTD, 5-21, 5-22
CTE, 5-21, 5-22
CTF, 5-9, 5-12, 5-15, 5-17,
 5-18
CTN, 5-21
CTO, 5-20, 5-33
CTP, 5-20, 5-21
CTR, 5-9, 5-13, 5-15, 5-17,
 5-18, 5-19
CVR, 5-20
CVU, 5-40
DAL, 5-28, 5-29
DBR, 5-28, 5-29
DCO, 5-28, 5-30
DCS, 5-28, 5-30
DHV, 5-39
DIN, 5-28, 5-29
DLI, 5-28, 5-29
DMU, 5-28, 5-30
DSS, 5-28, 5-30
EAI, 5-24
EAL, 5-24, 5-26
EAM, 5-24, 5-26
EBR, 5-24, 5-26
ECS, 5-24, 5-25
EHV, 5-39
ELI, 5-24, 5-26
EMM, 5-24, 5-25
ESR, 5-24
ESS, 5-24, 5-27
ETI, 5-24, 5-25
MBX, 5-43
MTM, 5-42
Cooling fan, 5-43

D

Decoder, 5-28
 Algorithm, 5-28, 5-29
 Algorithm mode, 5-30
 Bit rate, 5-28, 5-29
 Copy/Swap, 5-28

- Independent, 5-28
- Line format, 5-28, 5-29
- Mute, 5-28, 5-30
- Status, 5-28, 5-30
- Dialing, 4-4
 - Call termination, 4-5, 5-33
 - Manual, 4-4, 5-32, 5-33
 - Speed dial, 4-5, 5-30
- DIF101, 3-2, 5-7
- DIF102, 3-2, 5-7
- Digital audio, 3-7, 3-8, 3-9, 5-24, 5-25
- Digital Interface Module, 1-10, 3-2, 3-4, 3-7, 5-6, 5-8
- Display
 - ACE LED, 4-11
 - AES/EBU LED, 4-11
 - ALG1 LED, 4-12
 - Analog LED, 4-11
 - BER LED, 4-12
 - CCS LED, 4-11
 - CCSIMUX LED, 4-12
 - Character, 4-1
 - Contrast, 4-1, 5-43
 - Correlation, 1-4, 1-6, 4-7, 4-14, 5-40, 5-41
 - DIF LEDs, 4-4, 4-13, 5-8
 - DPLL LED, 4-11
 - Dual mono LED, 4-10
 - Encoder Status, 4-10
 - Framed LED, 4-12
 - G.722 LED, 4-10
 - Graphics, 4-2, 4-8
 - H.221 LED, 4-12
 - Headphone LEDs, 4-6, 4-14
 - Joint stereo LED, 4-10
 - LED brightness, 4-14
 - Level, 4-7, 4-13, 5-40
 - Message display, 4-14, 5-41
 - Mono LED, 4-10
 - MUSICAM LED, 4-10
 - Peak, 4-7
 - Phase, 4-2, 4-9, 5-42
 - PLL LED, 4-10
 - RCUE LED, 4-7, 4-13
 - SCUE LED, 4-7, 4-12
 - Spectrum analyzer, 4-2, 4-9, 5-42
 - Status, 4-1, 4-9, 4-12, 5-40
 - Stereo image, 1-4, 1-6, 4-7, 4-13, 5-40, 5-41
 - Stereo LED, 4-10

- SUM LED, 4-11

E

- Encoder
 - Algorithm mode, 5-24, 5-25
 - Algorithms, 5-24
 - Audio I/O, 5-24
 - Bit rate, 5-24, 5-25
 - Copy/Swap, 5-24, 5-25
 - Line format, 5-24, 5-26
 - Mono mix, 5-24, 5-25
 - Quick Configurations, 5-22
 - Sample rate, 5-24, 5-25
 - Status, 5-24
 - Timing, 5-24, 5-25

F

- Factory defaults, 4-9
- Fan, 5-43
- Features, 1-1
 - Algorithms, 1-1
 - Ancillary data, 1-2, 1-4, 1-5, 1-7
 - Audio, 1-2, 1-7
 - Audio compression, 1-8
 - Auto detection, 1-10
 - Control, 1-3, 1-8
 - Digital audio, 1-4, 1-5, 1-7
 - Digital Interface Modules, 1-10
 - Graphic display, 1-5
 - Headphone, 1-4, 1-5, 1-6
 - Keypad, 4-2
 - Mechanical, 1-2, 1-6
 - Options, 1-2
 - Quick Configuration, 1-9
 - Relays, 1-4, 1-5
 - Remote control, 1-4, 1-9
 - Time code, 1-7
- Front panel, 4-14

H

- H.221, 4-12
- Headphone, 4-5, 4-6, 4-14, 5-39
- Hot keys, 5-42

I

- Independent mono, 5-27

- Input level, 1-7, 3-5
- Installation, 2-1, 3-1
- ISDN, 1-10, 2-2, 3-4, 5-6, 5-8, 5-29
- ISO/MPEG Layer III, 4-11, 5-26

J

- J.52, 4-12, 5-29

K

- Keypad, 1-6, 4-2, 4-3, 5-1, 5-3, 5-4
 - Alphanumeric keys, 1-8, 4-3, 5-1, 5-3
 - Beeper, 1-8, 4-1, 5-43
 - Cue keys, 4-6
 - Cursor keys, 1-8, 4-3, 4-4, 5-3
 - Dial keys, 1-8, 4-4
 - Function keys, 4-9
 - Headphone keys, 1-8, 4-5
 - Hot keys, 1-9, 4-9
 - Level keys, 4-7
 - Measurement keys, 4-8
 - Menu keys, 4-5

L

- Level LEDs, 4-7
- Loopback, 4-2, 5-20, 5-38
 - Bit rate, 5-38, 5-39
 - DIF, 5-38
 - System, 5-38

M

- Menu
 - Navigation, 4-3, 5-3
 - Tree, 4-3, 4-5, 5-1, 5-3
- Music Line, 1-10, 4-13

N

- NT-1, 3-4, 5-8, 5-14

O

- Optical isolators, 1-5, 1-9, 3-8, 3-9

P

PLL

- Virtual actions, 1-10
- Power switch, 3-5
- Prima Logic Language, 1-10, 4-4, 4-11, 5-1
- Psychoacoustic parameters, 1-8

Q

- Quick Configurations, 1-9, 4-4, 4-5, 5-22, 6-5
- Editing, 5-23

R

- RCUE, 4-12
- Rear panel connectors, 3-5
- Relay outputs, 3-9
- Relays, 1-9, 3-7, 3-8, 3-9
- Remote control, 2-2, 2-3, 3-7, 4-9, 4-14, 4-15, 5-4, 5-5, 5-34, 5-35, 5-37
- Far end, 1-9, 5-5, 5-21
- Inband, 1-9
- Peripheral equipment, 1-7, 1-9
- Protocol, 5-35, 5-36, 5-37
- RS232, 2-2, 2-3, 3-7, 5-4, 5-34, 5-35
- RS485, 2-2, 2-3, 3-7, 5-4, 5-5, 5-34, 5-35

Terminal, 2-2, 5-1, 5-6

Timer, 5-5

Windows, 1-9, 2-2, 5-1, 5-5, 5-6, 5-13, 5-17, 5-19, 5-36

RS232, 1-6, 3-8

RS422, 1-10, 3-1, 3-2, 3-3, 5-7

RS449, 3-1, 3-2

RS485, 3-9

S

- Sampling rates, 6-3
- Sampling Rates, 1-8
- SCUE, 4-12
- Speed Dial, 1-9, 5-30, 6-5
- Editing, 4-5, 5-31
- Status indicators, 1-6, 4-9
- Summary alarms, 3-7
- Switch type, 5-14

T

- Terminal adapter, 4-4, 5-6
- Auto answer, 5-19, 5-20
- Auto reconnect, 5-19, 5-20
- Configuration, 5-21
- Connect time, 5-33, 5-34
- Dial time-out, 5-20, 5-33
- EAZ, 5-9, 5-12
- ID, 5-9, 5-11, 5-14, 5-16
- Inband, 5-9

Interface, 5-9, 5-13, 5-15, 5-17, 5-18, 5-19

LLC, 5-9, 5-12, 5-18, 5-19

Local check, 5-9, 5-11, 5-12

Loopback, 5-20

MSN, 5-9, 5-12, 5-18

Redial, 5-20, 5-33

Reset, 5-9, 5-13, 5-15, 5-17, 5-18, 5-19

SPID, 5-9, 5-11, 5-14, 5-16

Sub address, 5-9, 5-12, 5-14, 5-16, 5-18, 5-19

Switch type, 5-9, 5-10, 5-15, 5-18

TA101, 3-4, 4-13, 5-7, 5-8

TA201, 3-4, 5-7, 5-14, 5-17

TA301, 3-4, 5-7, 5-14

Time code, 1-5, 1-7, 3-9

Timing, 5-24

U

- Upgrades, 1-10, 5-37

V

- V.35, 3-1, 3-2, 5-7
- Virtual actions, 1-9, 1-10

X

- X.21, 1-10, 3-1, 3-2, 3-3, 5-7

