

# Table of Contents

Introduction	i	2.10.1.3 Transmission with H.221 framing	2-11
Chapter 1		2.10.2 Single Line Mode	2-11
1. Overview	1-1	2.10.3 Independent Mono	2-11
1.1 Digital Transmission Facilities	1-3	Chapter 3	
1.1.1 Dedicated Data Service ("Nailed-Up" DDS)	1-3	3. Advanced Configurations for Custom Applications	3-1
1.1.2 Switched-56	1-3	3.1 Decoder Independent Mode	3-2
1.1.3 ISDN Basic Rate Interface (BRI)	1-4	3.2 Broadcast Applications	3-2
1.1.4 Primary Rate ISDN (T1 & E1)	1-4	3.2.1 Monaural Audio to Six Locations	3-2
1.1.5 Long-Distance Interconnectivity (56-to-64kb/s)	1-5	3.2.2 Stereo Audio to Three Locations	3-4
1.1.6 International PSDN	1-5	3.2.3 Stereo Broadcasting to Six Locations	3-5
1.1.7 Other Digital Transmission Paths	1-6	3.3 Dual Algorithm Applications	3-7
1.1.7.1 Spread-Spectrum	1-6	3.4 Independent Mono / Dual G.722 Operation	3-7
1.1.7.2 Satellite Links	1-6	3.5 Saving Your Custom Configuration	3-9
1.1.7.3 Other Digital Transmission Systems	1-6	Chapter 4	
Chapter 2		4. Advanced Encoder and Decoder Features	4-1
2. Compression Algorithms and Line Formats	2-1	4.1 Digital Audio Input and Output	4-1
2.1 CCS MUSICAM® Digital Audio Compression	2-1	4.1.1 Selecting AES/EBU or S/PDIF Digital Audio	4-2
2.1.1 MUSICAM Compression Concepts	2-2	4.1.2 Digital Audio Timing	4-2
2.2 ISO/MPEG Layer III	2-3	4.1.3 Operation at 44.1 kHz Sampling Rate	4-7
2.3 G.722	2-3	4.2 Peak Level Detection	4-9
2.4 Performance Considerations	2-5	4.3 Quiet Detection / Audio Detection	4-9
2.5 Tolerance to Multiple Processing	2-6	4.4 Error Concealment	4-11
2.6 Post Production Processing Effects	2-6	4.5 Sine Detection	4-12
2.7 MUSICAM, ISO/MPEG Layer II and Layer III Sample Rates and Bit Rates	2-7	4.6 Encoder Header and Decoder Status Bits	4-12
2.8 Ancillary Data	2-8	4.7 A/D and D/A Calibration	4-13
2.9 Compatibility with older CCS codecs	2-9	Chapter 5	
2.10 Digital Transmission Line Formats	2-9	5. Remote Control Considerations	5-1
2.10.1 Inverse Multiplexing Functionality: CCSIMUX and J.52	2-9	5.1 Communications PROTOCOL definition	5-2
2.10.1.1 CCSIMUX	2-9	5.2 RS232 Considerations	5-4
2.10.1.2 ITU-T J.52	2-10	5.3 RS485 Considerations	5-4
		5.4 Inband Control of Far End <i>cdQPrima</i>	5-9
		5.4.1 Far End <i>cdQPrima</i> Control Using a Terminal	5-10

---

5.5	Windows Remote Control Program	5-11
5.5.1	Far End <b>cdoPrima</b> Control Using Windows® Control	5-12
5.6	Remote Control Error Summary	5-12

## Chapter 6

6.	Ancillary Data Features	6-1
6.1	Ancillary Data Basics	6-1
6.2	Ancillary Data Format	6-3
6.3	RS232 Ancillary Data	6-4
6.4	Other RS232 Data	6-5
6.5	SMPTE Time Code	6-6
6.6	Virtual Links, Cue LEDs, Relay Closures And Simulated Switches	6-8
6.7	Ancillary Data With Independent Mono Operation	6-8

## Chapter 7

7.	PLL Basics	7-1
7.1	PLL Events	7-1
7.1.1	Bit Error Rate Detection	7-2
7.1.2	Out Of Frame Counter	7-5
7.1.3	Silence / Audio Detection	7-6
7.1.4	Timers	7-7
7.1.5	Optically Isolated Inputs (option)	7-7
7.1.6	Simulated Switches	7-8
7.1.7	Status Event	7-9
7.1.8	Link Event	7-10
7.2	PLL Actions	7-10
7.2.1	Physical Actions	7-11
7.2.2	Link Actions	7-13
7.2.3	Virtual Actions	7-13
7.3	Event To Action Logic	7-14
7.4	PLL Examples	7-20
7.4.1	Auto Detection of Incoming Call Format	7-20
7.4.2	Auto Detection of Incoming Call Algorithm - Layer II or Layer III	7-23
7.4.3	Dial On Audio - Disconnect On Silence	7-25
7.4.4	Automatic STL Backup	7-26
7.4.5	Automatic Layer III Line and Bit Rate Fallback	7-27

## Chapter 8

8.	Psychoacoustic Parameter Adjustments for MUSICAM	8-1
8.1	Introduction	8-1

8.2	History	8-3
8.3	Basic Principle of MUSICAM	8-4
8.3.1	MPEG Encoder	8-5
8.3.2	MPEG Decoder	8-8
8.4	Adjustment of the Perceptual ModelA- Tool for the Sophisticated User	8-9
8.5	Changing Psychoacoustic Parameters	8-11
8.6	MUSICAM USA psychoacoustic model parameters	8-15
8.6.1	Parameter A - J (0 - 9)	8-15
8.6.2	Parameter K (10) Joint Minimum Subband	8-16
8.6.3	Parameter L (11) Anticorrectional Factor	8-16
8.6.4	Parameter M (12) Limit Subbands	8-16
8.6.5	Parameter N (13) Threshold of Hearing Table	8-17
8.6.6	Parameter O (14) Stereo/Dual Mono Safety Margin	8-17
8.6.7	Parameter P (15) Jnt..SKF.ISO	8-17
8.6.8	Parameter Q (16) Joint Boundary Adjustment	8-18
8.6.9	Parameter R (17) Demand Minimum Factor	8-18
8.6.10	Parameter S (18) Stereo/Dual Mono used subbands	8-18
8.6.11	Parameter T (19) Joint Frames Count	8-18
8.6.12	Parameter U (20) Peak <.49> RMS	8-19
8.6.13	Parameter V (21) 3 dB <.499> 6 dB	8-19
8.6.14	Parameter W (22) Adjustment Subband 3	8-20
8.6.15	Parameters X (23) - Z (25) Adjustment Subband 2 - 0	8-20
8.6.16	Parameter { (26) Subband hang Time	8-20
8.6.17	Parameter   (27) Scale Factor Adjustment	8-20
8.6.18	Parameter (28) Mono used subbands	8-20
8.6.19	Parameter (29) Joint Stereo used subbands	8-21
8.6.20	Parameter (30) Mono Safety Margin	8-21
8.6.21	Parameter (31) Joint Stereo Safety Margin	8-21

## Chapter 9

9.	What's Left	9-1
9.1	Security	9-1
9.2	On Line Help	9-4
9.3	Factory Defaults And User Profiles	9-6
9.3.1	Resetting Factory Defaults	9-6
9.3.2	Creating A User Profile	9-8
9.3.3	Reloading User Defaults (User Profile)	9-9
9.4	Option Installation	9-9
9.4.1	A1000 AES/EBU Digital Audio I/O	9-9

9.4.2	A1100 And A1200 Optical Isolated Control Inputs And Relay Outputs	9-9
9.4.3	A2100 SMPTE Time Code Reader/Generator	9-10
9.4.4	A1300 Optical Digital Audio I/O	9-11
9.5	Software Maintenance, and Upgrading, Version and serial Numbers	9-11

Audio Input	B-5
Audio Output	B-5
AES/EBU	B-6
RS232/RS485 Remote Control	B-6
Ancillary Data	B-6
Alarm Relay	B-6
Opto Inputs	B-7
Relay Outputs	B-7
RS232	B-7
Front panel remote control	B-7
RS485	B-7
SMPTE Time code	B-8
DIF101, DIF102	B-8
X.21	B-8
V.35	B-8
Appendix C -Factory Defaults	C-9
Appendix D -Opto-Isolator And Relay I/O	D-14
Opto Inputs	D-14
Relay Outputs	D-14
Appendix E -LCD Menu Tree	E-15
Appendix F -ISDN Ordering And Provisioning	F-23

## Chapter 10

10.	What's Wrong?	10-1
10.1	Rebooting (Start Here)	10-1
10.2	'1' Reset	10-2
10.3	Continuous Boot	10-2
10.4	Loopback Testing	10-3
10.5	Audio Problems	10-4
10.5.1	No Audio In Loopback	10-4
10.5.2	No Audio When Connected To Another Codec	10-4
10.5.3	Echo or Phase Distortion In Audio	10-6
10.6	Connection Problems (ISDN)	10-6
10.6.1	"NO CARRIER" Error Message	10-9
10.7	Connection Problems (Non-ISDN)	10-9
10.8	Line Errors	10-10
10.9	TA101 Setup	10-11
10.10	TA201 / TA301 Setup	10-13
10.11	Control Problems	10-14
10.12	Continuous Boot	10-16
10.13	Error Messages	10-19

North American ISDN Ordering Contacts	F-23
North American ISDN Provisioning	F-23
FAX-PAGE 1	F-24
AT&T 5ESS Custom	F-24
FAX-PAGE 2	F-25
AT&T 5ESS - National ISDN 1	F-25
FAX-PAGE 3	F-26
AT&T 5ESS -Custom	F-26
AT&T 5ESS -National ISDN	F-26
Northern Telecomm DMS-100 BC-35 National ISDN 1	F-27
FAX-PAGE 4	F-27
FAX-PAGE 5	F-28
Northern Telecomm DMS-100 BC-35 National ISDN 1	F-28
Appendix G -Specifications	G-29
Appendix H -One Year Limited Warranty	H-36

## Appendices

Appendix A -Cable Diagrams	A-1
Cable C1300. DB15M To V.35 Block	A-1
Cable C1400 -DB15M To V.35 DB25M	A-1
Cable C1500 -Prima 110 And 120 AES Adapter	A-2
Cable C1600 -SMPTE Time Code Cable	A-2
Cable C1700 -Ancillary Data And RS232 Cable	A-2
Cable C1800 -Rear Panel RS232 Remote Control Cable	A-3
Cable C1900 -Rear Panel RS485 Remote Control Cable	A-3
Cable C2000 -Front Panel RS212 Remote Control Cable	A-3
Appendix B -Rear Panel Connectors	B-4
<b>CDQPrima</b> 1xx Series	B-4
Audio Input	B-4
Audio Output	B-4
AES/EBU	B-4
RS232/RS485 Remote Control	B-4
Ancillary Data	B-4
Alarm Relay	B-5
Sync Data - Opto/Relay	B-5
<b>CDQPrima</b> 2xx Series	B-5